


Technical Details	Speed RPM	Collet mm/inch	Power KW/HP	Length mm/inch	Weight kg/lb	Consumption LPM / CFM	Noise (DB) LpA LwA	Uncertainty KpA KwA	Vibration m/s ²	Air Inlet inch	Pressure Bar / PSI
72200	25,000	6.0 (1/4)	0.22 (0.3)	192 (7.6)	0.52 (1.1)	57 (2.0)	79 90	3	< 2.5	1/4	4.5 (65)

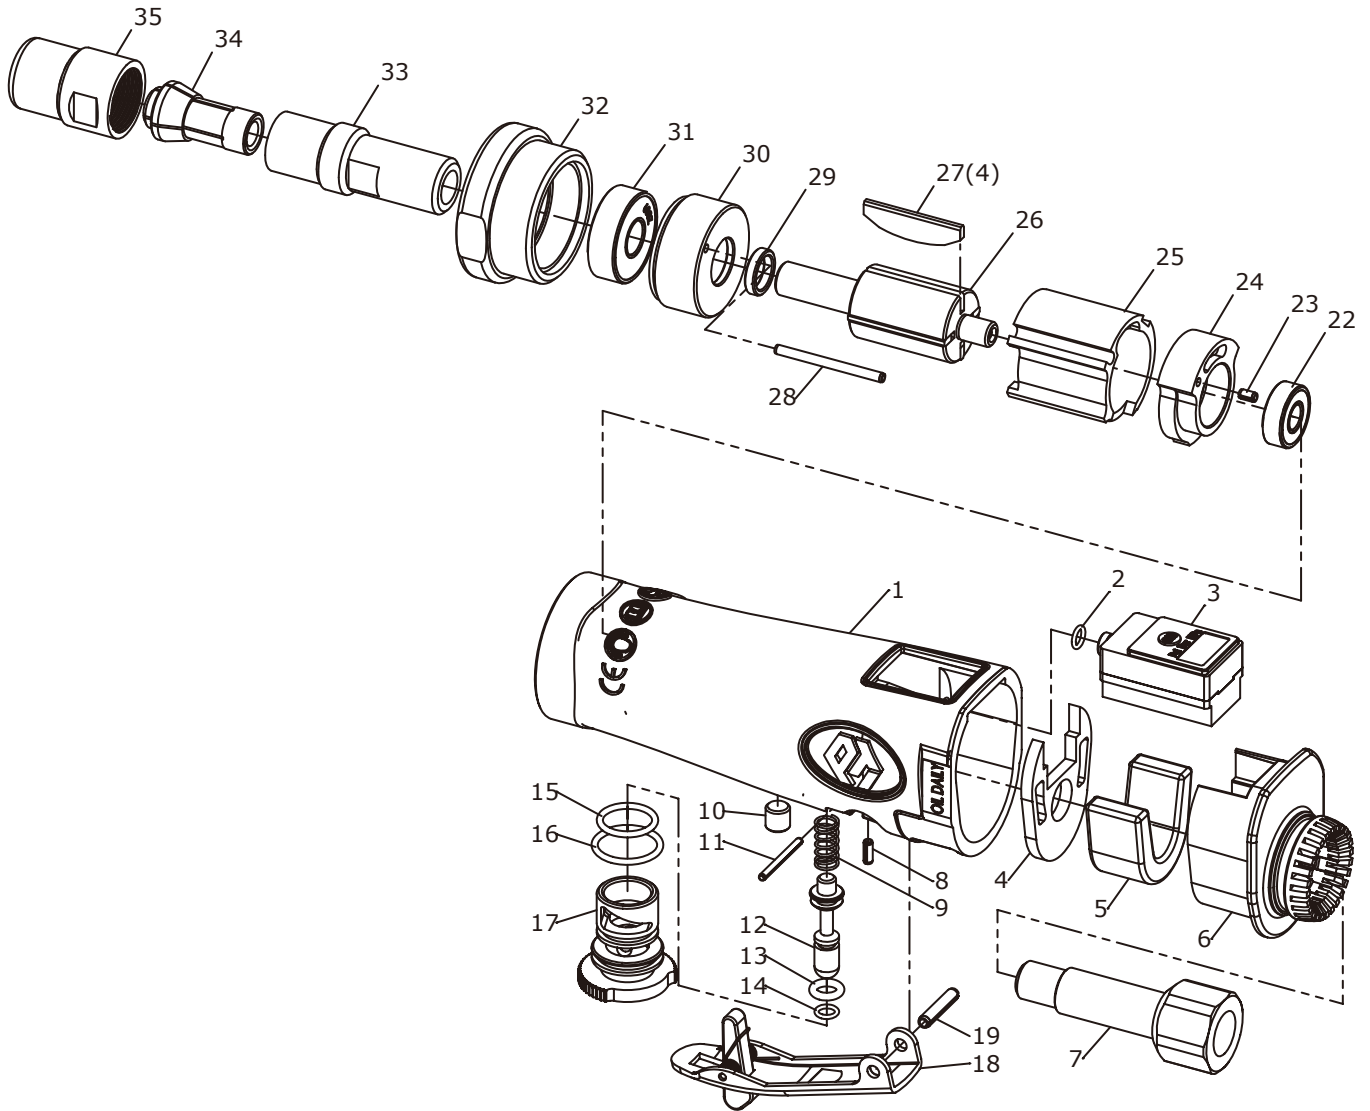

Index No.	Description	Quantity	Index No.	Description	Quantity	Index No.	Description	Quantity
1	Motor Housing	1	12	Valve Stem	1	25	Cylinder	1
2	O-Ring Ø1 x IDØ4	1	13	O-Ring P5	1	26	Rotor	1
3	Digital Gauge	1	14	O-Ring Ø1 x IDØ4	1	27	Blade	4
4	Gasket	1	15	O-Ring S12.5	1	28	Spring Pin Ø2 x 28mm	1
5	Muffler	1	16	O-Ring S15	1	29	Spacer	1
6	Muffler Detector	1	17	Regulator	1	30	Front End Plate	1
7	Air Inlet	1	18	Safety Trigger	1	31	Ball Bearing <608 Z>	1
8	Spring Pin Ø2 x 6mm	1	19	Spring Pin Ø3 x 16mm	1	32	Lock Ring	1
9	Spring	1	22	Ball Bearing <696 ZZ>	1	33	Collet Holder	1
10	M6 x 6mm Set Screw	1	23	Spring Pin Ø2 x 4mm	1	34	Collet	1
11	Spring Pin Ø1.5 x 20mm	1	24	Rear End Plate	1	35	Collet Jacket	1

Manual for Digital Pressure Gauge

Specifications

* Working Pressure Range :

Unit	Pressure Range	Resolution
PSI	0 ~ 200	1
BAR	0 ~ 17.0	0.1
Mpa	0 ~ 1.70	0.01

* Medium : Compressed Air

* Voltage : 3V DC Battery

* Battery Life : 1,500 hours (continuously)

* Electric Current : < 1.0 mA

* Operating Temperature : 0 ~ 45 °C (32 ~ 115 °F)

* Storage Temperature : -10 ~ 75 °C (15 ~ 165 °F)

* Accuracy : +(-) 0.75% Full Scale +(-) 1 digit @25 °C



Operation

ON / OFF		* Power On : Press the "ON" button. * Turn Off : Press the "ON" button, or the gauge will automatically shut off after the preset time.
Modification of Preset Function		
* Note : Please ensure to disconnect the air hose from the tool before modification.		
a	Function Selection	* Turn on the gauge 000. Then, press the "ON" button for 3 seconds. --- Release "ON" → -0- 3 Sec → -1- 3 Sec → -2- 3 Sec → -E- Fail to Modify. Try Again. Press "ON" to select the function item while it is showing on the LCD. Please turn on the gauge again in case you miss the selection.
b	Zero	* Refer to "a" to select the function item -0- -0- → Press "ON" → 00- → Press "ON" → 000 → Press "ON" → End Final Set Up. -E- Fail to Modify. Try Again.
c	Shut-off Time	* Refer to "a" to select the function item -1- . Default : 180 sec. -1- → Four cycles → 120 3 Sec → 150 3 Sec → 180 3 Sec → 240 → End Final Set Up. Press "ON" to select the time while it is showing on the LCD. Please turn on the gauge again in case you miss the selection. -E- Fail to Modify. Try Again.
d	Switch of Unit Mode	* Refer to "a" to select the function item -2- . Default : Bar -2- → Four cycles → Psi 3 Sec → Bar 3 Sec → MPa → End Final Set Up. Press "ON" to select the unit mode while it is showing on the LCD. Please turn on the gauge again in case you miss the selection. -E- Fail to Modify. Try Again.

Remark: Please do not soak gauge into water, oil or any solvent to avoid damage.